



HOW TO MEASURE HUB HEIGHT

The hub height is the measurement from the pump's mounting surface (where it mates to the engine), and the top of the hub surface (where the pulley mates to the hub).

